

HuddleCam HD 30X **Conferencing Camera**

DATA SHEET

Compatibility

- Windows 7/8/8.1/10
- Mac OS X
- Acano
- Adobe Connect
- BlueJeans
- Cisco Jabber Cisco WebEx
- Easymeeting
- Facetime
- Fuzebox
- Google Hangout
- GoToMeeting
- Lifesize
- Skype for Business(Lync)
- Polycom RealPresence
- Radavision
- Spontania
- Skype
- TurboMeeting.US
- Vidyo
- Vsee
- Zoom.US
- · Google Hangouts on Air
- YouTube Live

2 YEAR MANUFACTURER WARRANTY Warranty

Specifications

Camera & Lens

Video CMOS Sensor 1/2.8" CMOS 2.1 Mega Pixel Frame Rate 30fps 1920 x 1080p, 60fps 1280 x 720p Lens Zoom 30X Optical Zoom, 12X Digital Zoom f=4.3-138.3 4° (tele) to 63° Field of View Min Lux 0.5 Lux White Balance Auto/Manual/Outdoor/Indoor/One Push/ATW

Features

- 30X Optical Zoom
- USB 3.0 *(requires a
- quad core processor)
- RS-232
- 1920 x 1080
- 63° Field of View
- Up to 60fps
- 64 Presets
- IR Remote
- Certified SONY Lens



(1)

- 1. Lens 30x Optical Zoom
- 2. IR Receiver To receive IR remote
- controller signal 3. Power LED Blue LED blinks when unit is powered
- 4. Standby LED Orange LED blinks for Stand-By status


ideal for a large to auditorium sized meeting rooms. Comes standard with certified SONY lens.

The HuddleCamHD 30X is



Model Number: HC30X-GY-G2



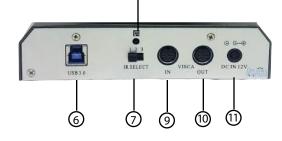

- 5. IR Receiver To receive IR remote controller signals
- 6. USB 3.0 Interface For connection to PC USB 3.0 port (also compatible with USB 2.0 port and driver)
- 7. IR Selective Swtich When using only one remote to control more than one camera, this switch will assign a unique ID to each camera
- 8. IR Receiver To receive IR remote controller signals
- 9. VISCA IN Port For hard wired remote control from a 3rd party PC, joystick, etc...
- 10. VISCA OUT Port/RS485 Used for daisy chaining multiple cameras for RS-232 RS-485 control
- 11. DC IN 12V Socket Only use the Power Adapter supplied with this camera

What's in the Box

30X Zoom USB 3.0 Camera
12V/2.0A DC Power Adapter
Installation Bracket & Screw
USB 3.0 Data Cable (3m), Serial Control Cable, RS-232C to RS-485 Cable
IR Remote Control
User Manual (also downloadable online)

Pan/Tilt Movement

Pan Movement	0-355°
Tilt Rotation	Up: 90°, Down: 45°
Presets	64 Presets, 4 patrol lines

Rear Board Connectors

High Definition Interface	USB 3.0
Controller Signal Interface	Mini DIN-8 (VISCA IN, VISCA OUT/RS485)
Controller Signal Config.	Dip-Switch Pin 7/TTL Signal
Baud Rate	9600 bds
Power Supply Interface	DC 12V 2A


Electrical Index

Power Supply Adapter	12V DC 2A
Input Voltage	12V DC (10.5-14V DC)
Input Power	24W (Max)
Working Enviornment	Indoor

Physical

Material	Aluminum, Plastic
Dimensions	5.38" W x 6.5" H x 6" D (7" w/ Tilt up)
(W x H x D) mm	(250mm x 140mm x 145mm) (177mm w/tilt up)
Weight	2.5 lbs (1.29 kg)
Temperature	32°F to + 113°F
Power Supply	-14°F to 140°F
Color	Silver Gray

Remote Contol

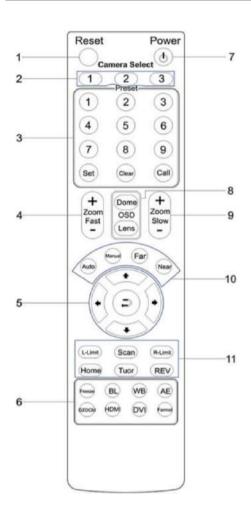

1. Reset

Restarts the camera and restores it to Factory Default settings. (Note: Will delete all memory)

- 2. **Camera Selection** Select Camera ID: 1, 2 or 3
- 3. **Preset Positions** 1-9: Preset Positions Set: Setting Preset Position Clear: Clear Preset Position Call: Call Preset Position Note: If you want to set (or call) the first preset position to 1, you should press number key "1", then press "Set" (or "Call") to set (call) the position

4. Fast Zoom in/out Control Zone

- +: Zoom in quickly
- -: Zoom out quickly

5. Pan/Tilt Controller

- 1 Move Up
- Move Down
- Move Left
- Move Right
- Auto Pan
- 6. Additional Function Zone Freeze: Image Freeze BL: Back-light Compensation WB: White Balance AE: Auto Exposure D Zoom: Digital Zoom

7. Power Supply Switch

Switch for turning camera on (i.e. Stand-By mode vs. Working mode)

8. OSD Menu Zone

Dome OSD: Enter Pan Tilt Zoom OSD menu Lens OSD: Enter lens OSD menu

- 9. Slow Zoom In/Out Zone
 - +: Zoom in slowly
 - -: Zoom out slowly

10. Focus Control Zone

Auto: Turn on auto focus Manual: Turn on manual focus Far: Set focus at farther distance Near: Set focus at nearer distance

11. Pan/Tilt Function Zone

L-Limit: Set left boundary limit scanning position Scan: Enable Boundary Scanning (Auto Panning) R-Limit: Set right boundary limit scanning position Home: Go to camera's Home position Tour: Enable automatic patrol tour of presets Rev: Enable image flip for ceiling mounting

Still have questions? Give us a call.

